

Activation of camera redundancy G-SIM/FailoverCam

G-SIM/FailoverCam

The G-SIM/FailoverCam option activates the failover function of a G-Core camera channel. If a G-Core server fails, the camera channels are taken over by a failover server for which this option is enabled. This minimizes the possible downtime by restoring the system immediately.

Note: The G-Core Failover (3.06760) is additionally required for the functionality. The number of G-SIM/FailoverCam option required is equal to the total number of camera channels of all G-Core servers of this site.

High reliability due to automatic function takeover of a G-Core camera channel.

Minimization of possible downtime.

Simple installation and parameterization.

Turnkey delivery and installation or turnkey assembly and connection

Model: G-SIM/FailoverCam

Brand: Geutebrück