


# Quick Installation Guide G-Cam/E3-Series IP Cameras


## Adding IP Cameras

Please double click at desktop on the G-Set icon  to open the G-Set configuration menu.

### Step 1: Connection to a server


To connect G-Core with a (local or remote) server,

- Double-click on a connection available under *Connections* in the selection menu or
- In the Connection wizard dialog select a server from the list and click on the icon.
- By clicking *Connection wizard*, you can also configure new server connections.

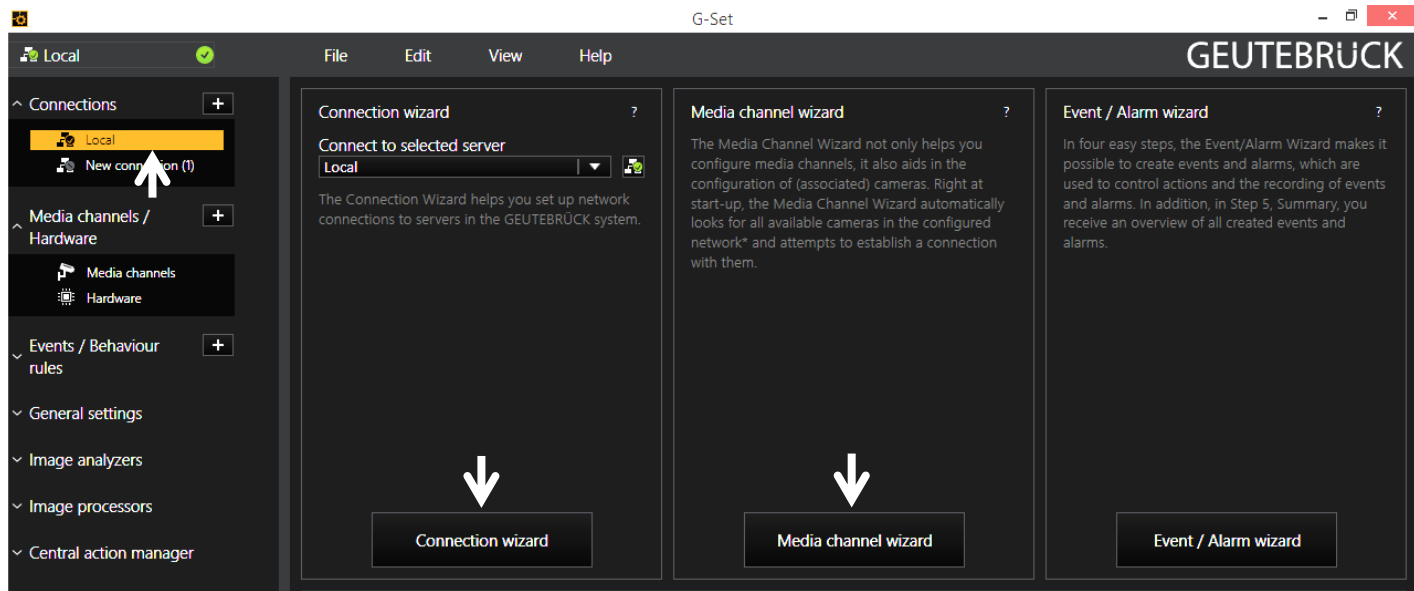


### Step 2: Activation and configuration of Media channels.

Left mouse click at *Media channel wizard* and click on tab *Cameras* opens the following window

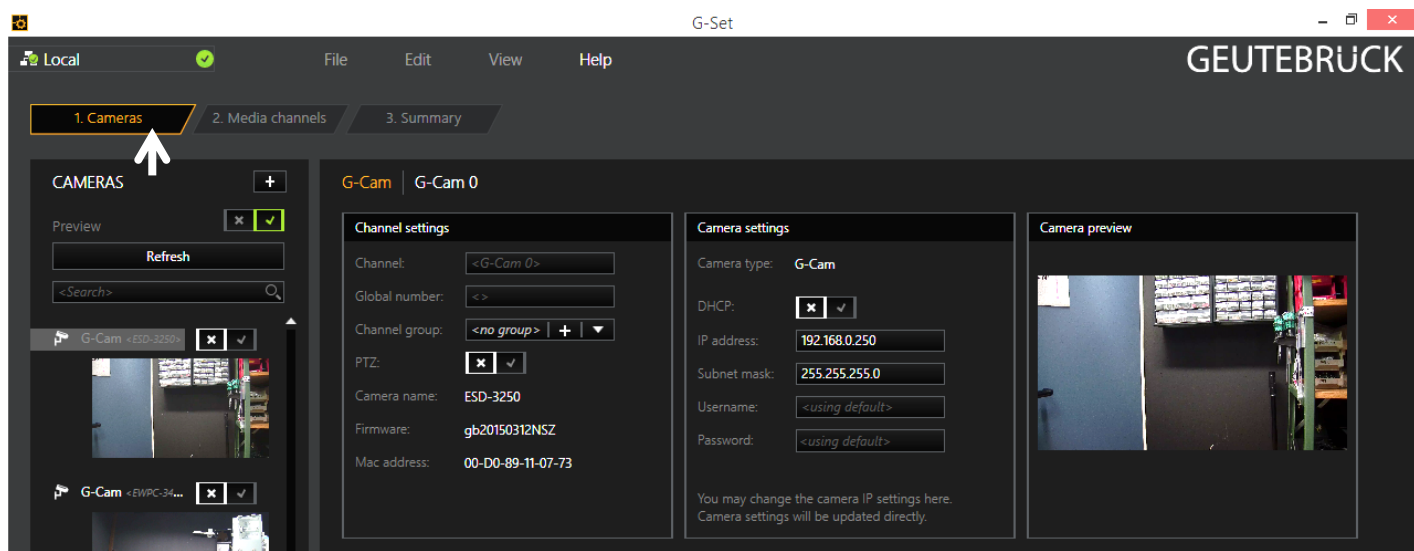

The Media Channel Wizard automatically searches for existing network cameras and displays them in the first column.  
Cameras for which access rights are available are also displayed with a small camera image.

You can now select the desired camera by clicking the tick box (changes to green) and edit the general information and the camera-specific data.

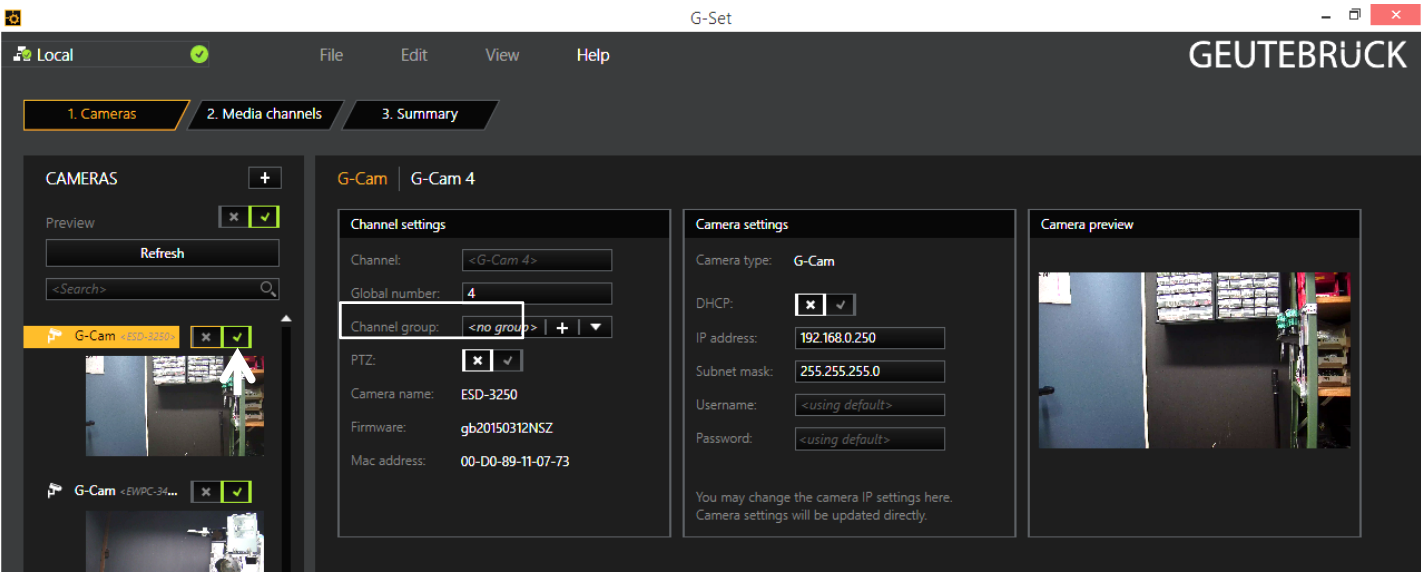

**NOTE:** If you want to control a PTZ camera, the tick box **PTZ** in the menu *Channel Settings* must be activated.

Left click on the tab *Media channels* opens the configuration window.  
At left column (camera tree) please choose the desired camera.




In the camera menus you can make the desired settings for *Permanent Recording* and *Live Stream*.


# Quick Installation Guide G-Cam/E3-Series IP Cameras

## Step 3: Summary (check settings, confirm and transfer settings to the server).


Mouse click on tab *Summary* provides you with an overview of all the settings that have been defined for your cameras.

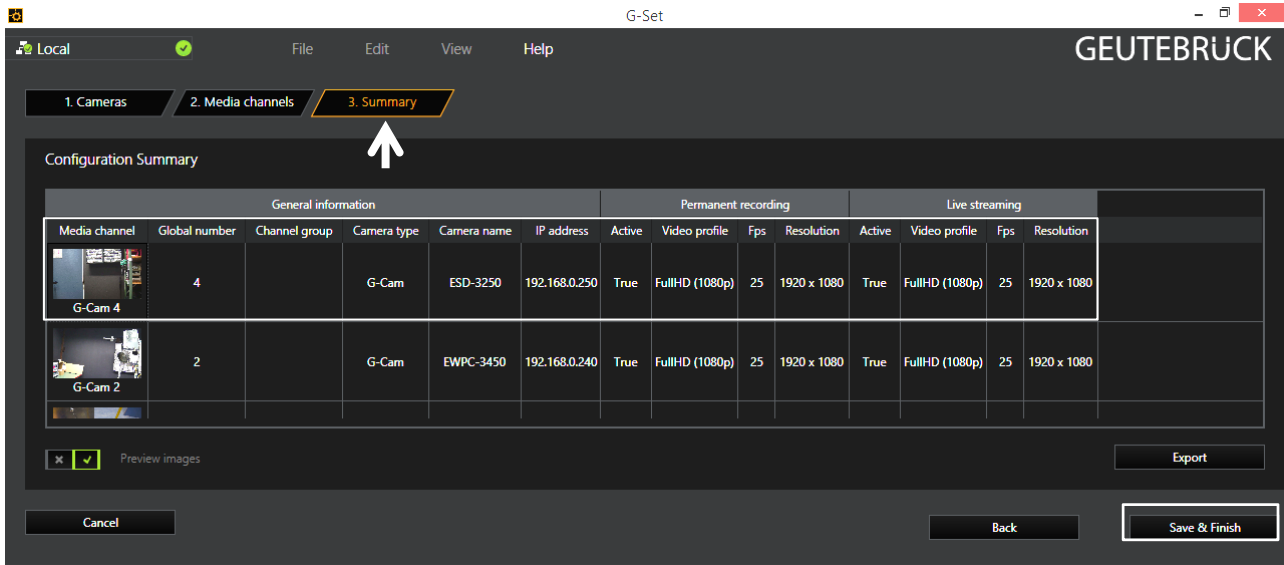


Please confirm your settings by clicking the button *Save & Finish*.

**IMPORTANT:** For settings to take effect, they **must** be sent to the server by clicking the icon .

You can find the *transfer button*  on the *command bar* of G-Set.

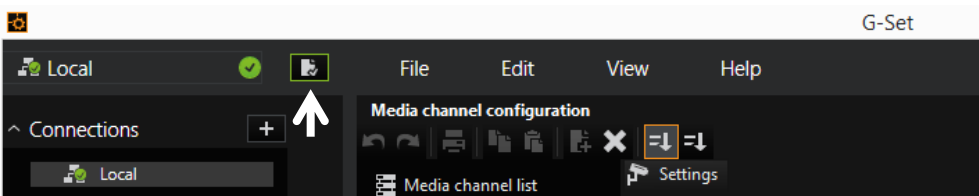

Finally, with click at *Hardware* and *Media channels*, you can check whether the camera is present in the network and the media channels are configured correctly.

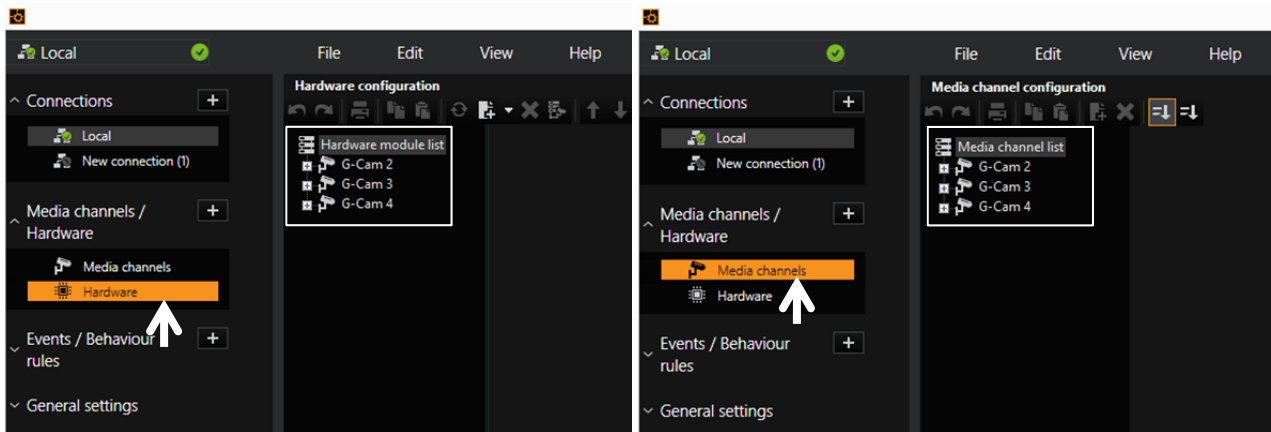

## Commissioning an IP Camera in G-Set




**NOTE:** For correct installation of IP cameras one **Option G-Core/CamConnect** must be available for each camera.

Available options are shown in G-Set at *General settings - Options*.


Required options can be ordered using *General settings - Options* in G-Set.

After clicking on *Options*, the options dialog opens with the first tab, which shows an overview of the available options.

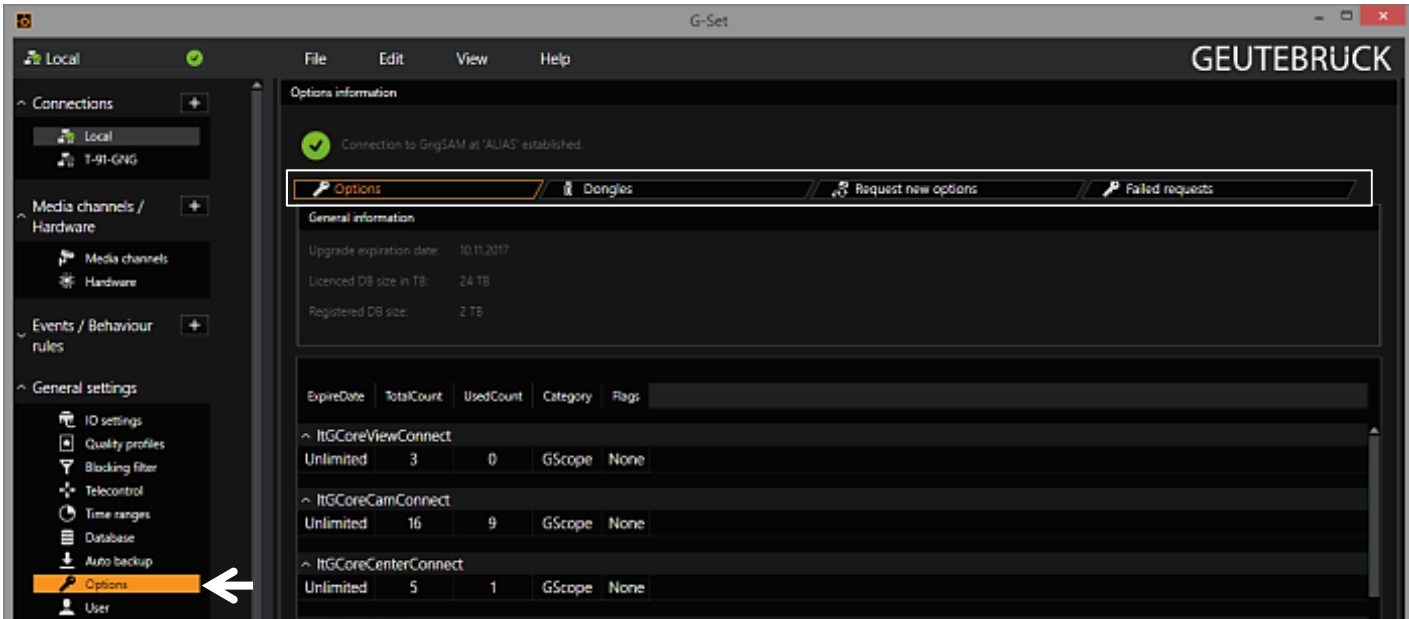

The dialog shows the four tabs *Options*, *Dongles*, *Request new options* and *Failed requests*.

### Request new options

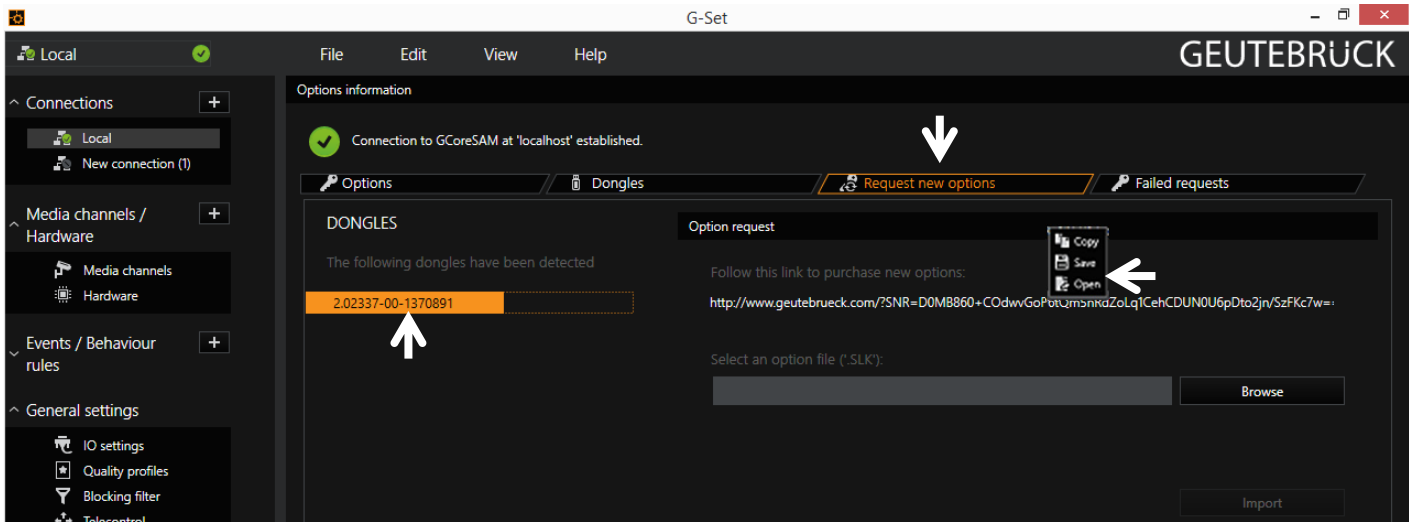

New options can be requested using this dialog. When you click the dongle that will be assigned the new options, an URL appears in the field *Follow this link to purchase new options*. Right clicking this URL opens a menu in which the URL can be copied, saved or opened in the default browser. After passing the URL to a browser, follow the instructions on the GEUTEBRÜCK website.