


This guide is for quick installing and connecting the Full HD Multi-Streams Ultra-WDR Box IP Camera. For more details, please refer to the User's Manual of the camera in the supplied CD.

Camera's Connectors

DC 12V/ AC 24V/ PoE

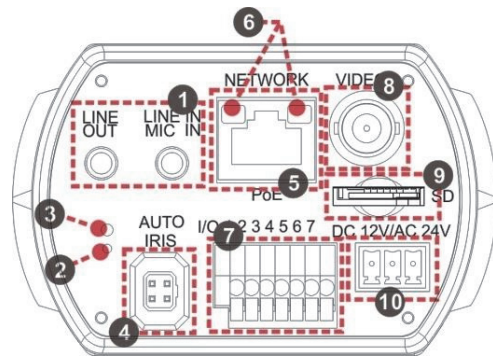

No.	Connector	Definition
1	Audio I/O	Two-way audio transmission
2	Power LED	For power connection indication (green light)
3	Default Button	Press the button with a proper tool for at least 20 seconds to restore the system.
4	Auto Iris	For auto iris lens connection
5	PoE Network	For network and PoE connections
6	Network LEDs	For network connection and activity indication
7	Alarm I/O *	1 Alarm Out +
		2 Alarm Out -
		3 Alarm In +
		4 Alarm In -
8	BNC	For analog video output (stream dependent)
9	microSD Card Slot	Insert the microSD card into the card slot to store videos and snapshots. Do not remove the microSD card when the camera is powered on.
10	Power (DC12V / AC 24V)	+ DC 12V AC 24V ~
		(GND)
		- DC 12V GND AC 24V ~

*Do **NOT** connect external power supply to the alarm I/O connector of the camera.



NOTE: It is not recommended to record with the microSD card for 24/7 continuously, as it may not be able to support long term continuous data read/write. Please contact the manufacturer of the microSD card for information regarding the reliability and the life expectancy.

Mounting C/CS Mount Lens

Follow the instructions below to mount the C/CS Mount Lens to the camera.

- Remove the plastic cover from the camera.
- Mount the C/CS Mount Adapter to the camera.
- Attach the lens to the adapter.

Camera Cabling

Please follow the instructions below for cable connections.

Power Connection

Please use a DC 12V / AC 24V power adaptor and plug it to the power connector of camera and the power outlet. Alternatively, users can use an Ethernet cable and connect it to the RJ-45 connector of the camera and a Power Sourcing Equipment (PSE) switch.



NOTE: If PoE is used, make sure PSE is in use in the network.

Ethernet Cable Connection

 
Connect one end of the Ethernet cable to the RJ-45 connector of the camera, and plug the other end of the cable to the network switch or PC.



NOTE: In some cases, Ethernet crossover cable might be needed when connecting the camera directly to the PC.



NOTE: Check the status of the link indicator and the activity indicator LEDs. If the LEDs are unlit, please check the LAN connection.



Green Link Light indicates good network connection.

Orange Activity Light flashes for network activity indication.

Before Login to the Camera

A client program will be automatically installed to the PC when connecting to the camera. Before logging in to the camera, please ensure downloading the ActiveX control is allowed by either changing the ActiveX controls and plug-ins or setting Internet's security level to default. For further details, please refer to the User's Manual in the supplied CD.

ActiveX Controls and Plug-ins Settings	Internet Security Level
Step 1: Start the Internet Explorer (IE). Step 2: Select <Tools> from the main menu of the browser. Then click on <Internet Options>. Step 3: Click on the <Security> tab and select <Internet>, and click on <Custom level> to change ActiveX settings. Step 4: Set "ActiveX controls and plug-ins" items to <Prompt> or <Enable>.	Step 1: Start the Internet Explorer (IE). Step 2: Select <Tools> from the main menu of the browser. Then click on <Internet Options>. Step 3: Click on the <Security> tab and select <Internet>. Step 4: Down the page, click <Default Level> and click on <OK> to confirm the setting. Close the browser window, and open a new one later for accessing the IP camera.

Camera Login

The default configuration is **DHCP**. If no DHCP server is in network, the camera sets itself to its default IP address **192.168.0.250**. You find the camera via the **Device Searching Tool** (on the CD). Therefore, to access the camera for the first time, please set the IP address of the PC as: 192.168.0.XXX; for example:

IP Address: 192.168.0.100

Subnet Mask: 255.255.255.0

Login ID and Password

- Key in the camera's IP address in the URL bar of the web browser window and hit on "Enter".
- Enter the default username (**root**) and password (**admin**) in the prompt request dialogue. Note that username is case sensitive.

Install the ActiveX Control


- After connecting to the camera, the request for installing the ActiveX control will appear just below the URL bar.
- Right click on the information bar, and then click on <Install ActiveX Control...> to permit ActiveX control installation.
- In the pop-up security warning window, click on <Install> to start downloading the DCViewer software on the PC.



- Click on <Finish> after DCViewer installation is completed.

Browser-based Viewer

The main page of the IP camera user interface is shown as the figure below. Please note that function buttons will vary depending on the camera model.

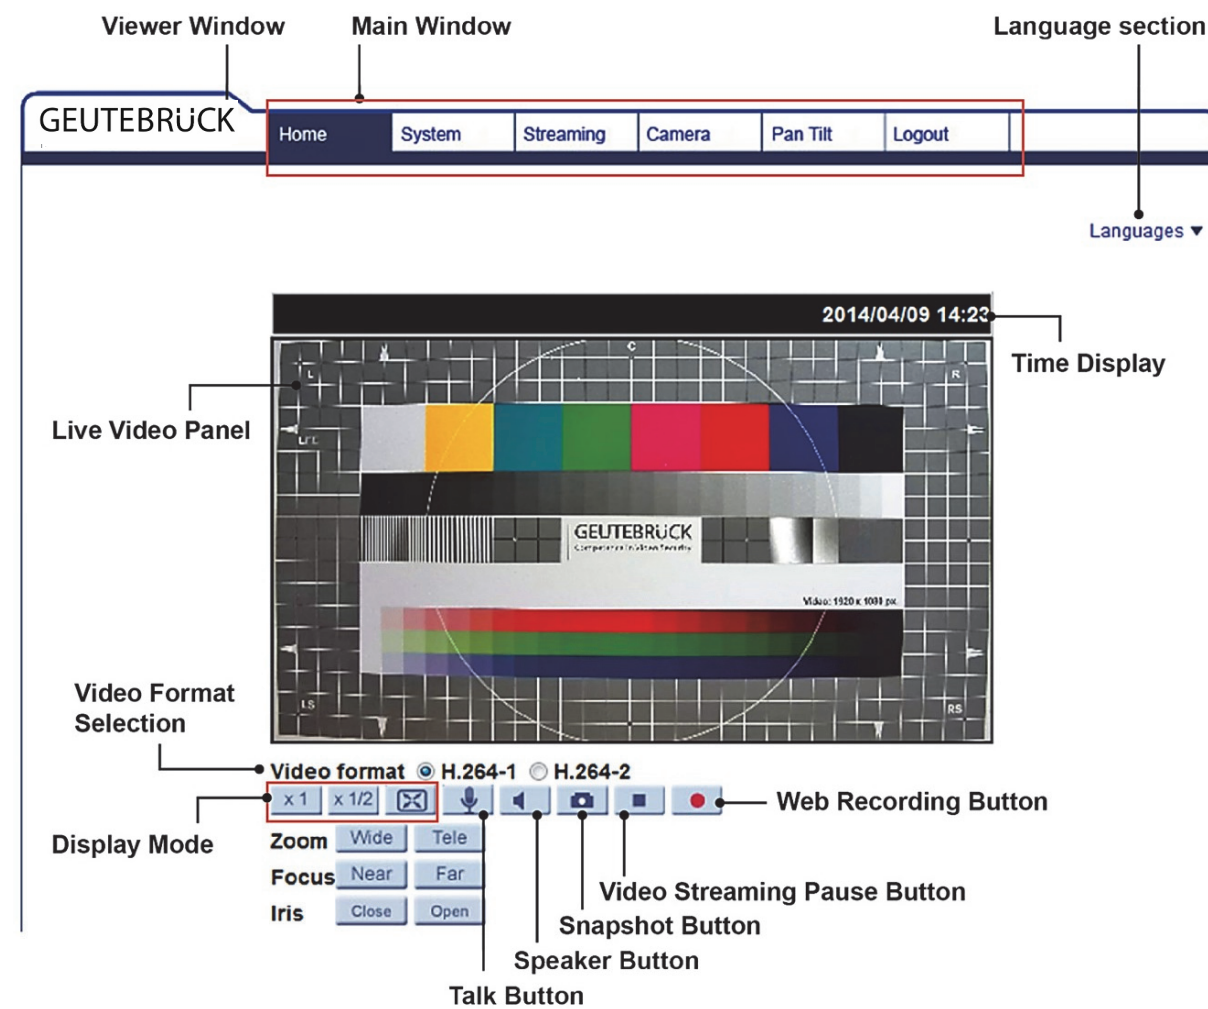

G-Cam/EBC-3140

Full HD Ultra-WDR Box IP Camera Quick Guide

Ver. 1.0



NOTE: For details about configuring the camera in GEUTEBRÜCK-Software (**G-Set** and **GSC-Setup**), please refer to the Quick Guides, which can be found on the supplied CD ROM.