

G-Cam/EWPC-5280 Micro Bullet IP Camera Quick Guide

This Quick Start Guide describes how to quickly install and connect the G-Cam/EWPC-5280 Micro Bullet IP Camera. For more information, refer to the IP Camera Installation/User Guide. shop.geutebrueck.com

Installation Notices

- The camera must be installed by qualified persons. The installation should comply with local regulations.
- Do not replace the batteries of the camera independently. There is a risk of explosion if the battery is replaced with an incorrect type. Used batteries must be disposed of according to local regulations.
- If you want to use an external power source, ask the camera manufacturer for a suitable device.


Camera’s Connectors



No.	Connector	Definition
1	RJ-45	For network and PoE connections
2	Power Jack (DC 12V)	Power connection

microSD Card Slot / Default Button

The position of the microSD card slot and the default button are shown as below.

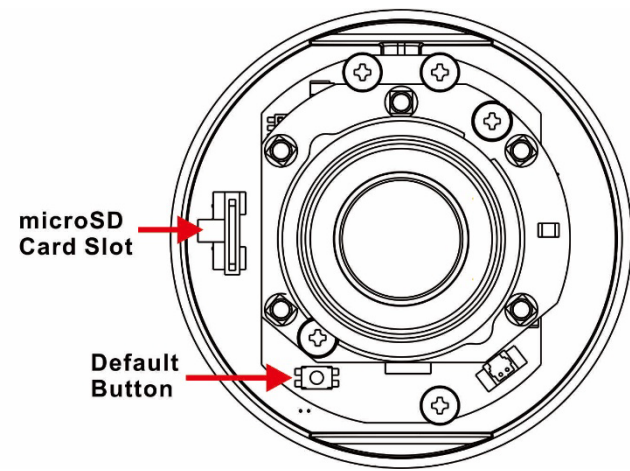

microSD Card Slot

Insert a MicroSD card into the slot to record videos and still images. DO NOT remove the card while the camera is in operation.

Note: It is not recommended to record to the microSD card in 24/7 mode as most microSD cards are not designed for permanent recording.

Default Button

Press the button with a proper tool for at least 20 seconds to restore the system.

Camera Cabling

Please follow the instructions below for cable connections.

Power Connection

Use a DC 12V adaptor and connect it to the power connector of the camera. Then, connect the adaptor to the power outlet. Alternatively, users can use an Ethernet cable and connect it to the RJ-45 connector of the camera and a Power Sourcing Equipment (PSE) switch.

NOTE: If PoE is used, make sure PSE is in use in the network.

Zero Downtime Power Switching (ZDT)


When users connect DC12V power jack and the RJ-45 port at the same time, the power input comes from the RJ-45 connector. If the RJ-45 power source fails, the camera will switch power input seamlessly to the DC12V port until the RJ-45 power source is restored.

Ethernet Cable Connection

Connect one end of the Ethernet cable to the RJ-45 connector of the camera, and plug the other end of the cable to the network switch or PC.

NOTE: In some cases, Ethernet crossover cable might be needed when connecting the camera directly to the PC.

NOTE: Check the status of the link indicator and activity indicator LEDs. If the LEDs are unlit, please check the LAN connection.



IMPORTANT: We recommend operating IP cameras only in isolated networks or behind suitable firewalls.

Initial login to the IP camera

The first time you access the IP camera, you will be prompted to change your password. You must perform this step to continue.

NOTE: Passwords must be at least 12 characters long, with an uppercase letter, a lowercase letter, and a numeric character or a special character ~@#\$\$%^&* _-+=:;<>

For more information, refer to the user manual of the IP camera.

Camera Login

The default IP address of the camera is: 192.168.0.250, so to access the camera for the first time, set the IP address of the PC as follows: 192.168.0.XXX; for example:

IP Address: 192.168.0.100


Subnet Mask: 255.255.255.0

Login ID and Passwort

- Enter the corresponding IP address of the camera in the URL field of the web browser and press "Enter".
- Enter the default user name (root) and password (admin) in the pop-up window. Note that the user name is case sensitive.
- Change the user password according to the instructions in the section "Logging in to the IP camera for the first time".

Web browser view

- The figure below shows the home page of the IP camera's web interface. Which functions are actually available depends on the camera model.

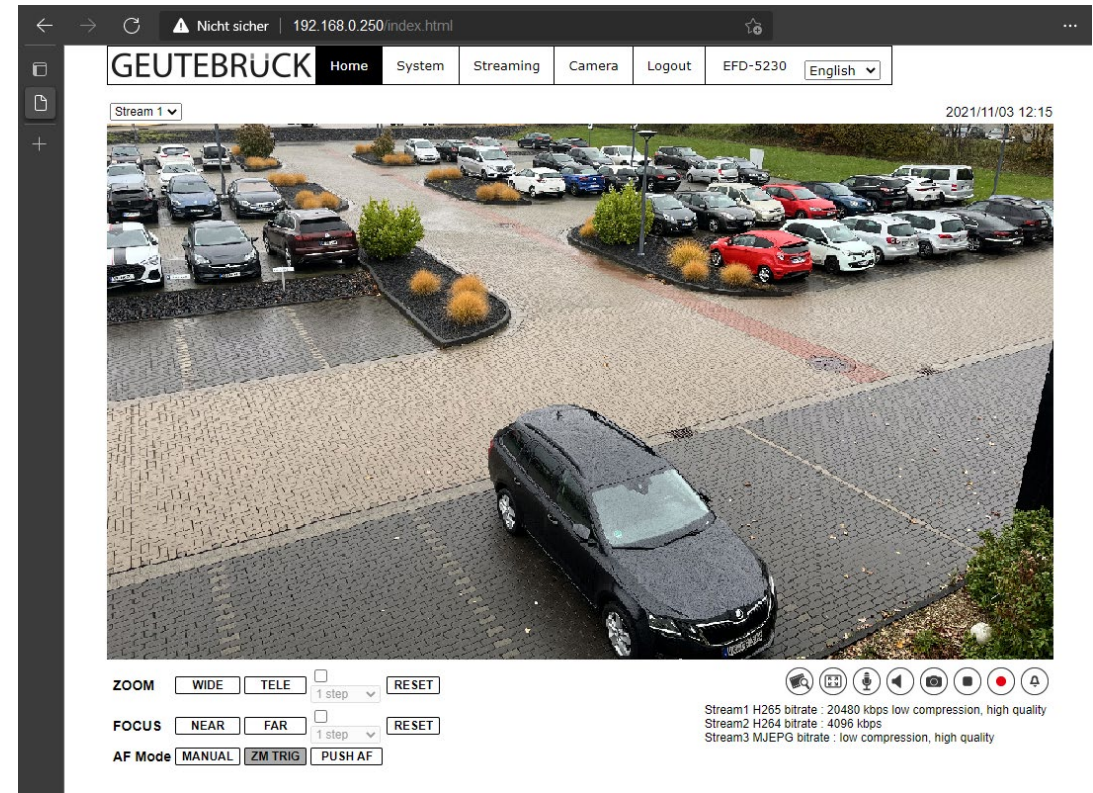

Live view in web browser

The live view in the browser window is done in a H.264/H.265 StreamPlayer, if this is not executable on your system, the system tries to display a compatible MJPEG view, which is only possible in reduced quality.



NOTE: Quick start guides for configuring the camera using GEUTEBRÜCK - software (G-Set and GSC-Setup) can be found on our Partner Portal website under Support.
support.geutebrueck.com

G-Cam/EWPC-5280

Micro Bullet IP Camera Quick Guide

Ver. 1.0